



# STARTER / GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1012316	STARTER - GENERATOR (INCLUDES ITEMS 1 - 26) .....	1
1	1013004	ASSEMBLY, ARMATURE (INCLUDES ITEMS 2, 3, 4, 5 AND ARMATURE) .....	1
2	1013000	SPACER.....	1
3	1013001	SHAFT, BALL BEARING OUTPUT .....	1
4	1013002	RETAINER, BEARING .....	1
5	1013005	COMMUTATOR, BALL BEARING .....	1
6	1013009	SCREW, POLE PIECE .....	4
7	1013010	ASSEMBLY, FIELD COIL .....	1
8	1013007	PACKAGE, TERMINAL HARDWARE (F1 AND F2) .....	2
9	1013017	PACKAGE, TERMINAL HARDWARE (DF) .....	1
10	1013018	KIT , PULLEY NUT AND SCREW (INCLUDES ITEMS 11 - 15) .....	1
11	N/A	HEX NUT, M14 x 2.....	1
12	N/A	WASHER, LOCK, M14 .....	1
13	N/A	SCREW, CROSS - RECESSED, M5 x .8 x 18MM (WITH LOCK WASHER AND FLAT WASHER) .....	3
14	N/A	SCREW, CROSS - RECESSED, M5 x .8 x 16MM (WITH LOCK WASHER) .....	2
15	N/A	SCREW, CROSS - RECESSED, M4 x .7 x 10MM (WITH LOCK WASHER .....	4
16	1012999	BELL, OUTPUT SHAFT END .....	1
17	1013003	KEY.....	1
18	1013013	LEAD, CROSSOVER .....	2
19	1013011	HOLDER, BRUSH .....	1
20	1014699	PACKAGE, BRUSH (INCLUDES 4 BRUSHES).....	1
21	1013016	SPRING, BRUSH .....	4
22	1012990	PACKAGE, TERMINAL HARDWARE (A1 AND A2) .....	2
23	1012992	BOLT, CLAMP, M6 x 1 x 180MM .....	2
24	1012993	BELL, COMMUTATOR END .....	1
25	1012991	COVER, BRUSH INSPECTION PORT .....	3
26	1017653	COVER, BRUSH INSPECTION PORT, WITH DRAIN .....	1

G

5